

OCEANSIDE

ACOUSTIC ECO-PANEL KIT

OCEANSIDE Wall Installation Overview




DIRECT WALL INSTALL WITH ROTOFAST™ SNAP-ON ANCHOR

These installation suggestions consist of a common process for OCEANSIDE installation on a dry wall substrate.


(For other substrate applications: <https://rotofast.com/snap-on-anchor>)

Rotofast Snap-on Anchors are a fast and secure solution for fiberglass core acoustical panel installations on walls.


SUGGESTED TOOLS YOU WILL NEED

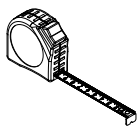

Tape Measure




Pencil



Level




Flat-head Screwdriver



Hammer




Common Nail



Drill

ITEMS INCLUDED

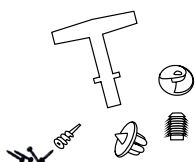

Rotofast
Snap-On Anchors

OCEANSIDE

ACOUSTIC ECO-PANEL KIT

OCEANSIDE Wall Installation Overview



DIRECT WALL INSTALL WITH ROTOFAST™ SNAP-ON ANCHOR

1. Measure and mark on the wall where the panels will be placed. Mark the orientation of the panel on the back side of the panel to ensure that the fabric grain is facing the way you want it.



TIPS: Measure the height and width of your wall in several points as walls are often irregular with imperfect angles. Use a level to achieve a straight install.

OCEANSIDE

ACOUSTIC ECO-PANEL KIT

OCEANSIDE Wall Installation Overview



DIRECT WALL INSTALL WITH ROTOFAST™ SNAP-ON ANCHOR

2. Using the RotoFast install tool included, screw the RotoFast anchors into the back of the panel.



NOTE: Anchor should be flush with the panel.

Anchor Placement Guide

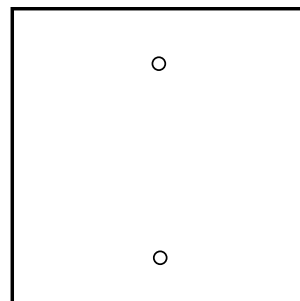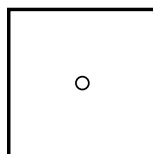


OCEANSIDE

ACOUSTIC ECO-PANEL KIT


OCEANSIDE Wall Installation Overview

DIRECT WALL INSTALL WITH ROTOFAST™ SNAP-ON ANCHOR

3. Insert marking plugs (included in RotoFast kit) into the center hole of the anchor.

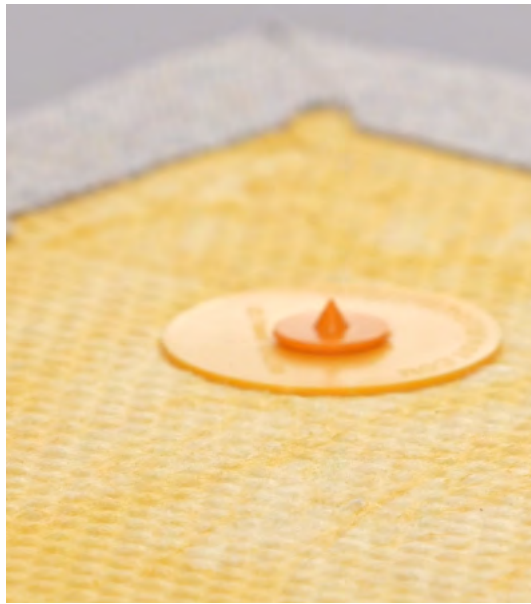

4. Once all of your markers are installed, check your orientation. Then, line your panel up with your marks on the wall and press the panel firmly against the wall to mark your anchor spots.

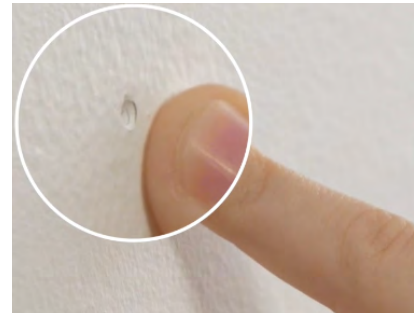

OCEANSIDE

ACOUSTIC ECO-PANEL KIT

OCEANSIDE Wall Installation Overview

DIRECT WALL INSTALL WITH ROTOFAST™ SNAP-ON ANCHOR

5. For a drywall surface, use a hammer and common nail to create a small hole where your marks are.



6. Use a drill to screw the Easy Anchors into the holes you created.



OCEANSIDE

ACOUSTIC ECO-PANEL KIT

OCEANSIDE Wall Installation Overview

DIRECT WALL INSTALL WITH ROTOFAST™ SNAP-ON ANCHOR

7. Take a 2" pan head screw and screw it into a black ratchet.



8. Screw ratchets into wall at places marked.



OCEANSIDE

ACOUSTIC ECO-PANEL KIT

OCEANSIDE Wall Installation Overview

DIRECT WALL INSTALL WITH ROTOFAST™ SNAP-ON ANCHOR

9. Remove the marking plugs using a flat-head screw driver.



10. Line the panel up with the ratchet anchors on the wall. Once you feel them engage, press hard on the panel to secure to wall.



OCEANSIDE

ACOUSTIC ECO-PANEL KIT

OCEANSIDE Wall Installation Overview

DIRECT WALL INSTALL WITH

ROTOFAST™ SNAP-ON ANCHOR

11. Enjoy your beautiful space!



Suggested Pattern Options

1"		2"		1"	2"	2"	
				1"		2"	2"
2"		1"	1"	1"	2"	1"	
			1"				

1"	1"	1"	2"		2"	1"
	2"	2"				
2"	1"	1"	2"	1"	1"	2"

2"	1"	2"		1"	2"	2"	2"
1"				2"	1"		2"
2"	1"	1"	2"	1"			