

LAMVIN

Acoustical Products Manufacturer

760.806.6400

Drawing no.
15054-1

Project Name:

Z - Clip Mounting System

Drawn by.
Jared

Date.
9/30/2015


Description: **Step 1: Mechanically Fasten Z-Clips and Velcro to Substrate via Screws & Anchors**
Step 2: Mechanically Fasten Z-Clips and Velcro to Back of Panel (if not pre-installed)
Step 3: Press Top of Panel above Substrate Mounted Z-Clip slide Panel down to engage Z-Clip press Panel Flush with Substrate to Engage Velcro Pads.

Revision.
1.0





Scale.
NTS

* Velcro pads mechanically fastened to substrate and panel, helps negate seismic movement

Acoustic Panel

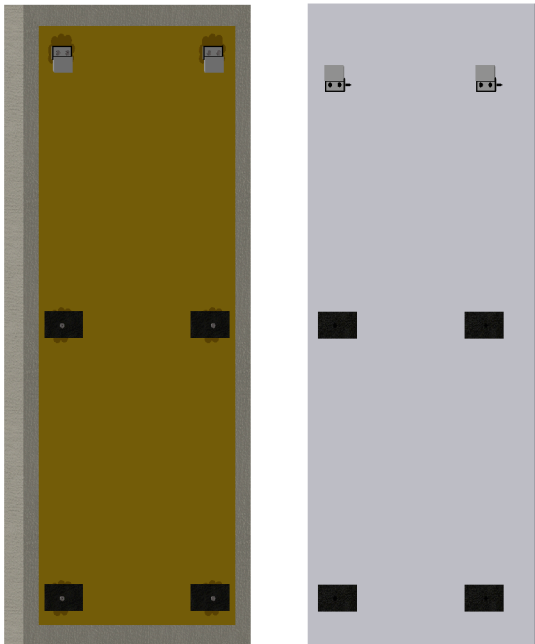

Wall

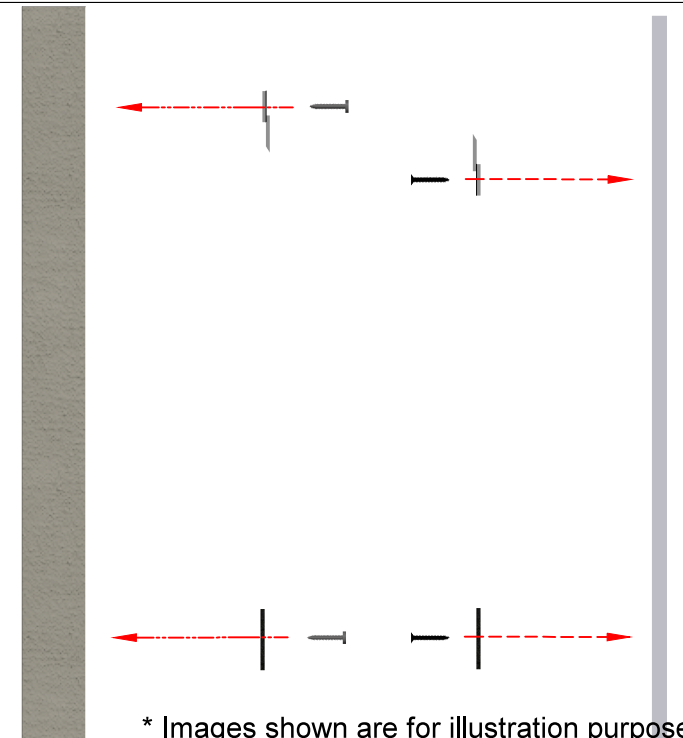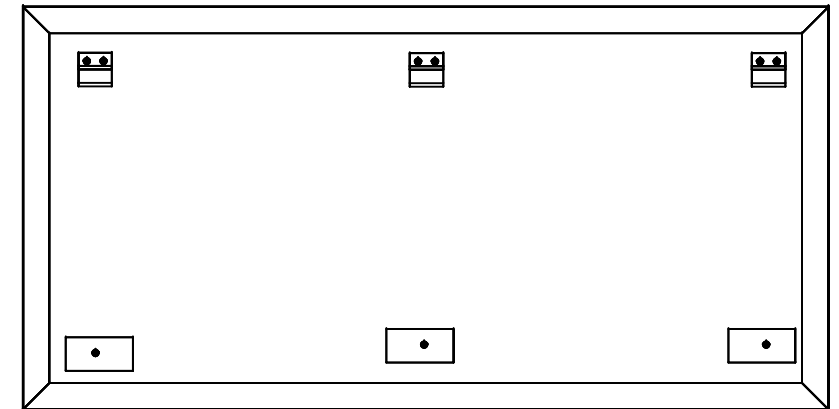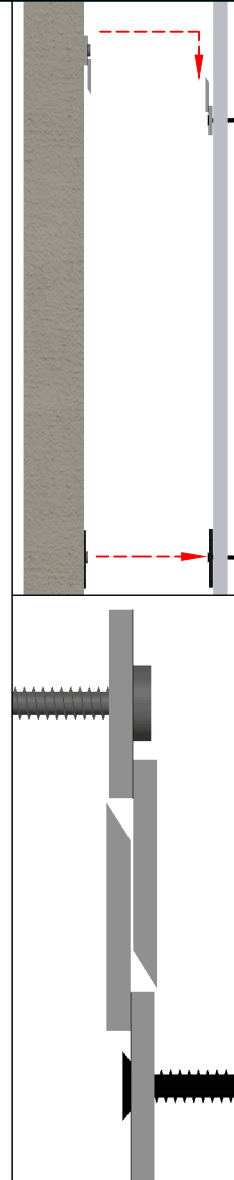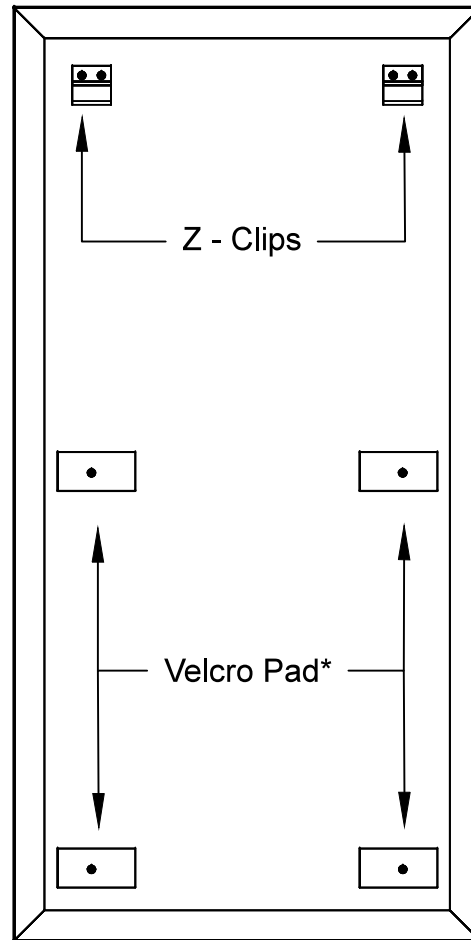

* If adhesive is used in lieu of mechanical clips to mount panels, a walnut sized portion of glue in clip and velcro locations is recommended.

* Images shown are for illustration purposes only.