

# LAMVIN

Acoustical Products Manufacturer

760.806.6400

Drawing no.

**15068-1**

Project Name:

## Z - Clip Mounting System [Cleat Offset]

Drawn by.

Jared

Date.

9/30/2015

Description: **Step 1: Mechanically Fasten Wood Cleat to Substrate via Screws & Anchor**  
**Step 2: Mechanically Fasten Z-Clips and Velcro to Wood Cleat via Screws & Anchor**  
**Step 3: Place Top of Panel above Substrate Mounted Z-Clips, slide Panel down to engage Z-Clips, press Panel Flush with Substrate Engaging Velcro Pads.**

Revision.


1.0

Scale.





NTS

\* Velcro pads mechanically fastened to substrate and panel, helps negate seismic movement

### Acoustic Panel

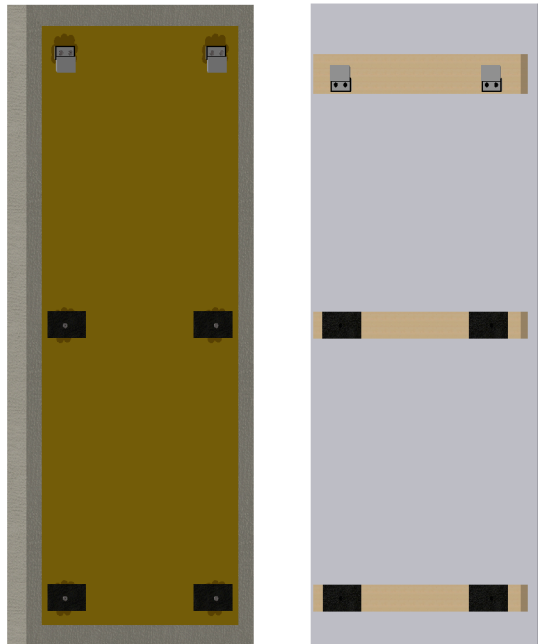

### Substrate

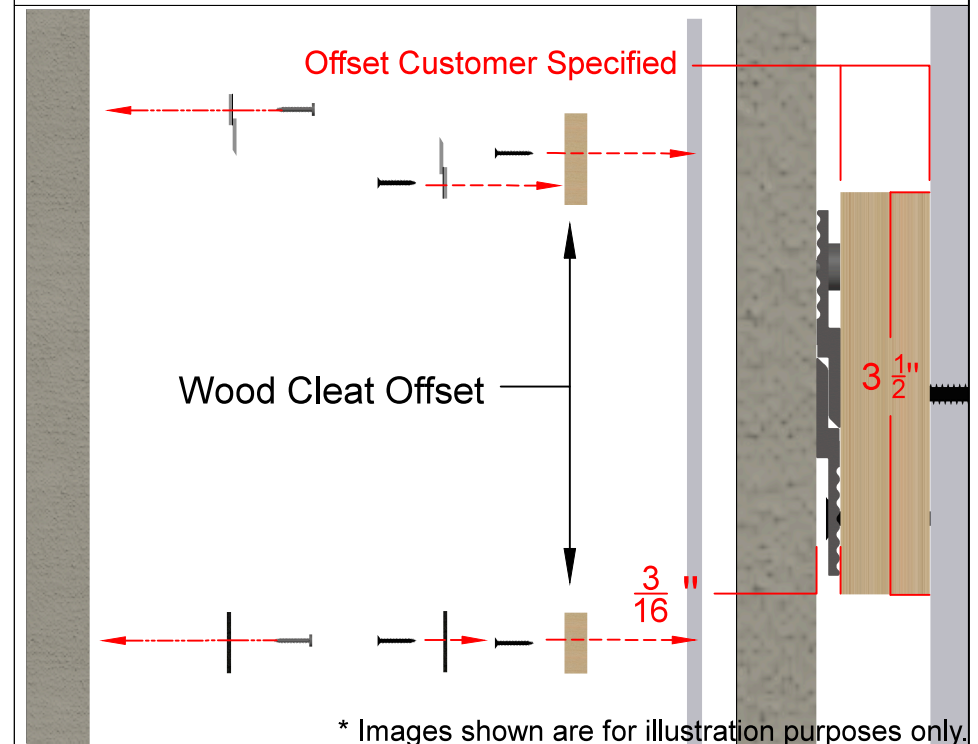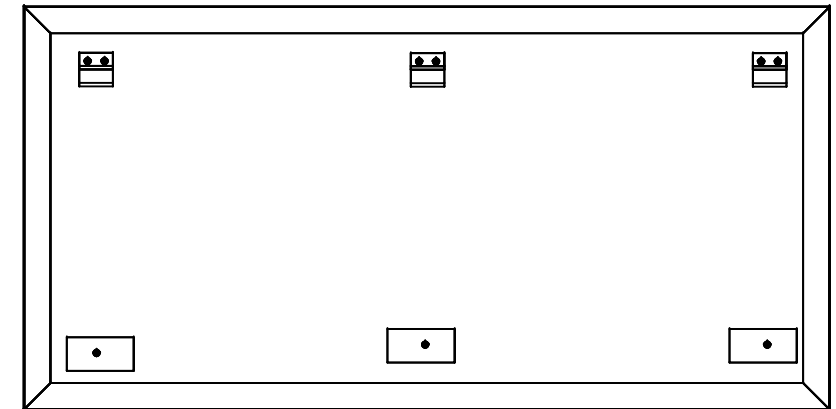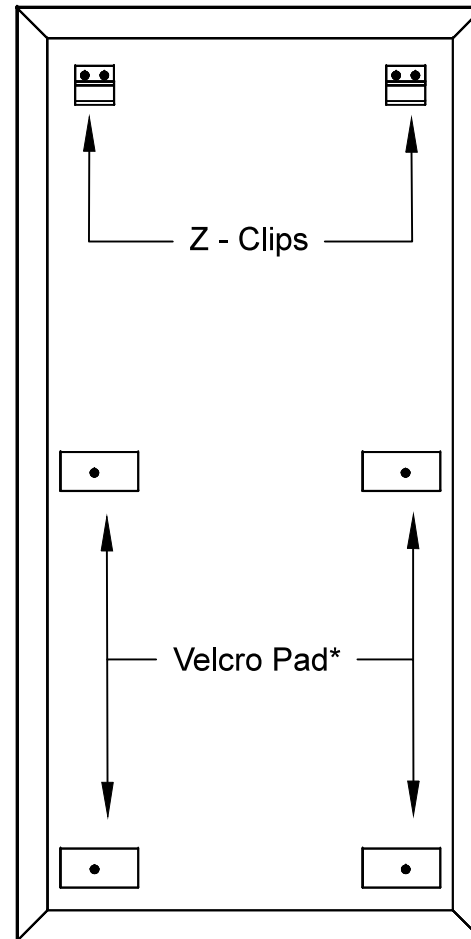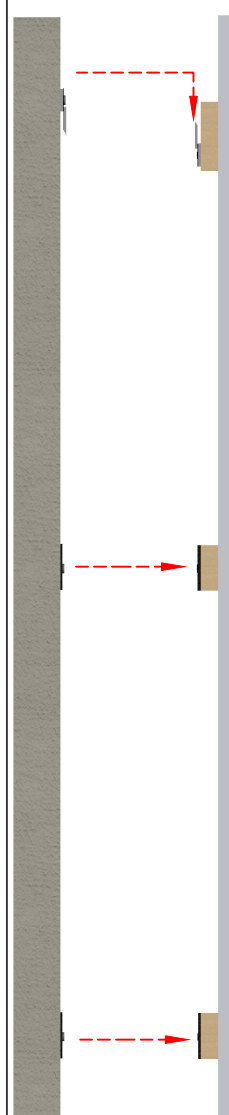

\* If adhesive is used in lieu of mechanical clips to mount panels, a walnut sized portion of glue in clip and velcro locations is recommended.

\* Images shown are for illustration purposes only.